



## Disassembly / Assembly of LEMO-Plug Type FMW.

1. Disassembly of bend relief.  
Use some drops of ethyl alcohol (spirit) between cable and bend relief, for an easier dismounting.

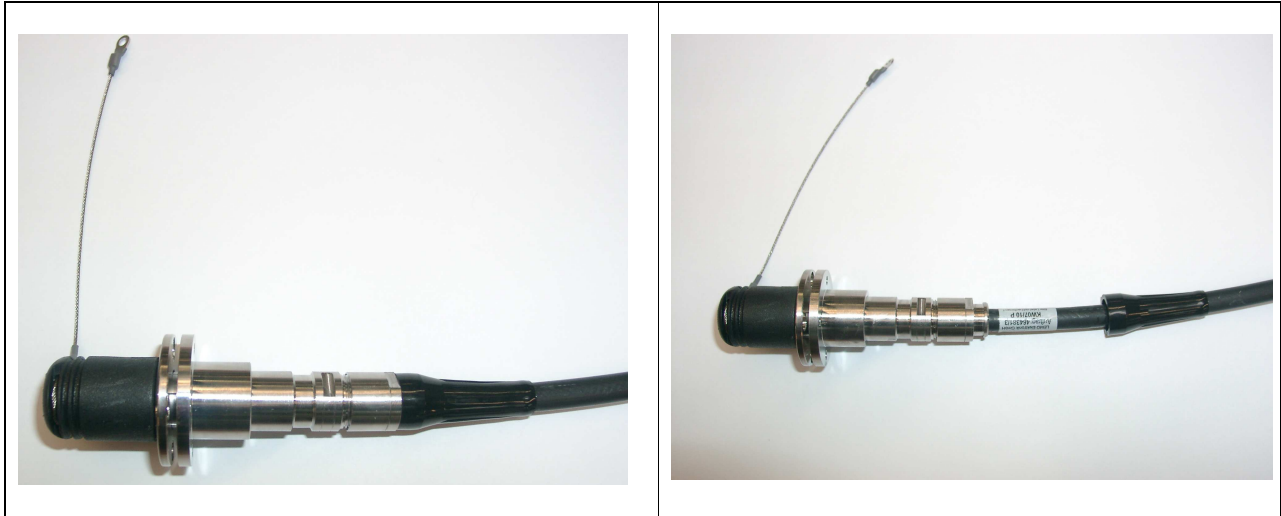


2. Unscrew of bend relief nut (spanner gap SW15).

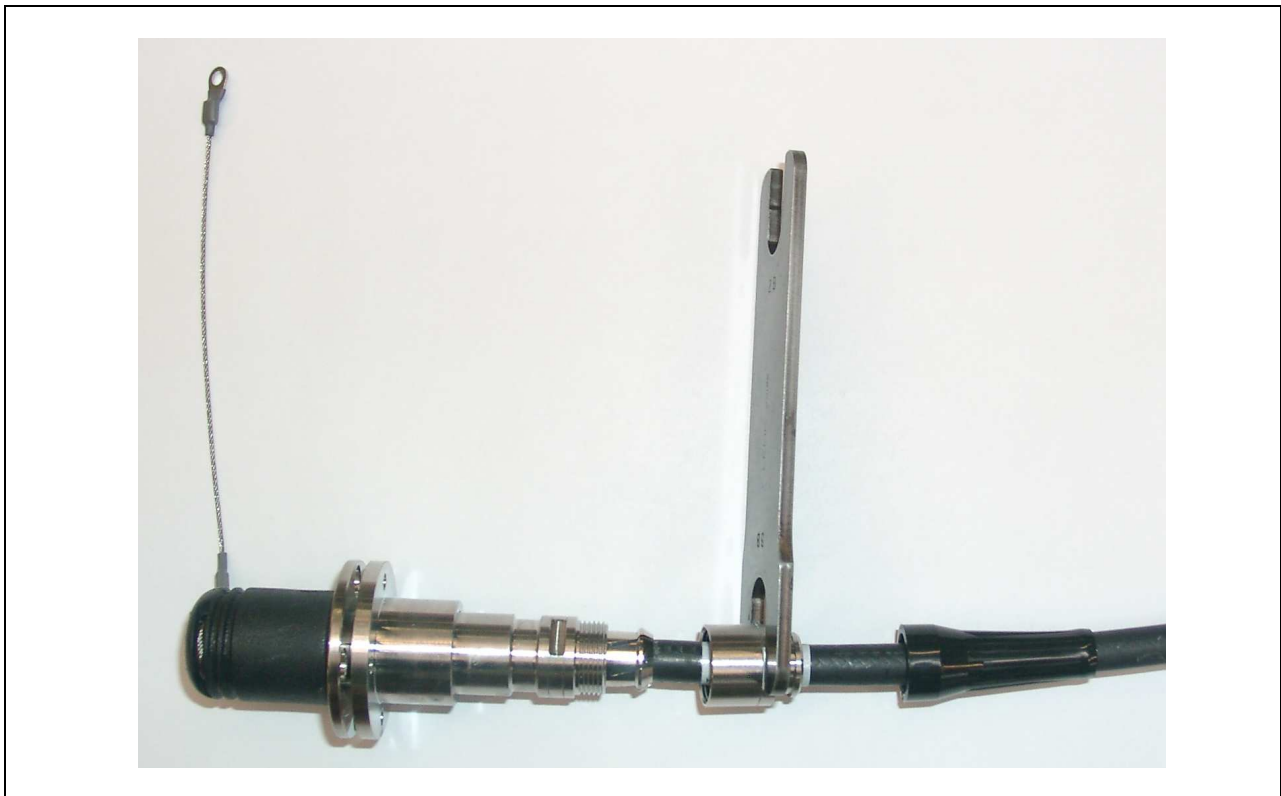


INDEX MIT ÄNDERUNG	DATUM	NAME
DATEI: C:\Documents and Settings\leicch.BELDENCDTEUROPE\Desktop\Assembly_Instruction_Plug_FMW.doc	ERSTELLER:	19.02.10 Streicher

3. Unscrew of adapter-tube and dismounting of the external body.

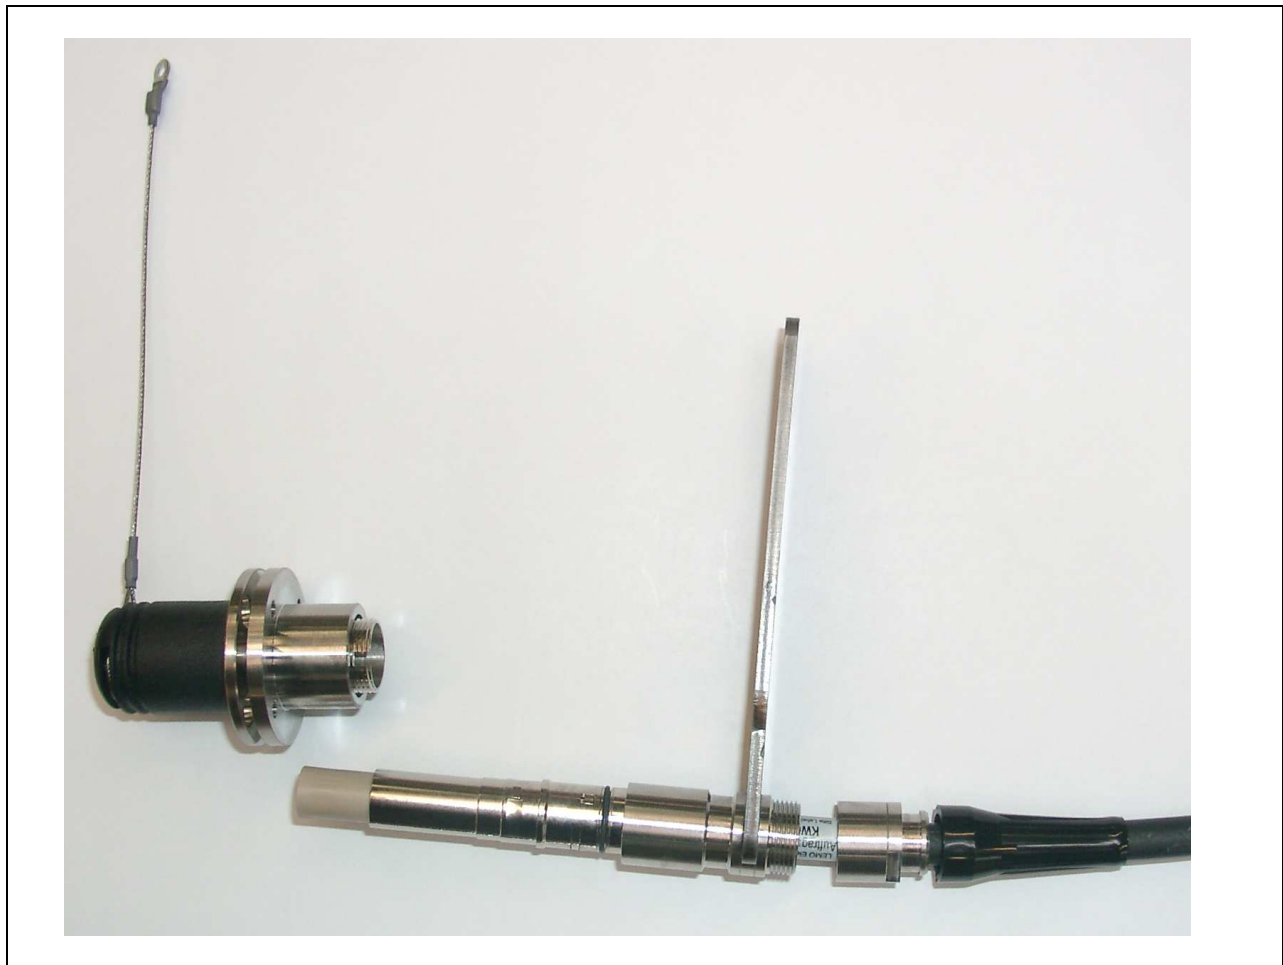

4. Assembly of LEMO-plug type FMW follow backwards.  
Attention: for fitting the external body it is necessary, that the guide pin will be correctly aligned.  
Max. Tightening torque for the nut = 3Nm. Secure the nut with one drop LOCTITE 243

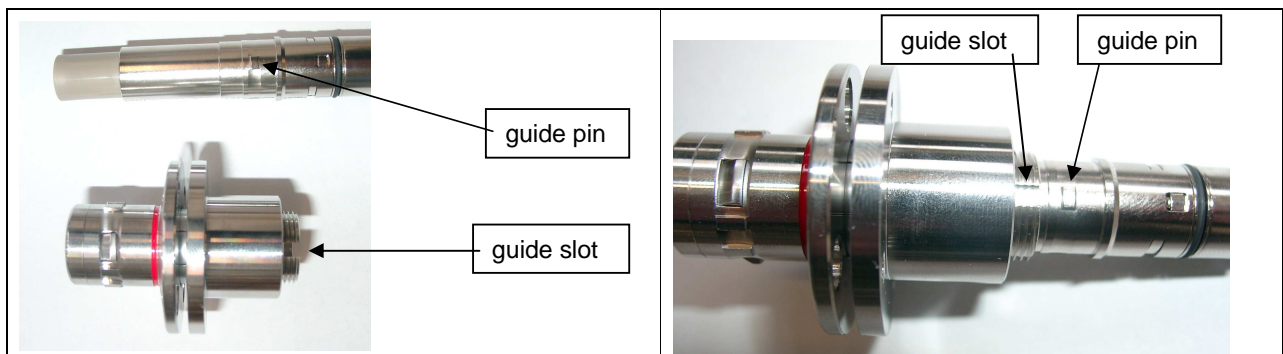

INDEX MIT ÄNDERUNG	DATUM	NAME
DATEI: C:\Documents and Settings\leicHH.BELDENCDTEUROPE\Desktop\Assembly_Instruction_Plug_FM.W.doc	ERSTELLER:	19.02.10 Streicher